

TC-Helicon VoiceTone Create XT Detailed Style List

Style	Preset	Var.	Style Name	Blocks ON/OFF				Tweak Parameter					Block Details							
				FX	µMod	Delay	Reverb	Balance	Reverb	Delay	µMod	FX	FX - Transducer Style	FX - HardTune	FX - Routing	µMod Style	Delay ms L.	Delay ms R.	Reverb Style	
Showcase	1, A	0	Broadway Hall	off	off	off	on	Reverb	Decay	Feedback	Detune	HighPass	LOWCUT 2	OFF	LEAD FX	MICROMOD CLONE	600	300	SMOOTH PLATE	
		1, B	1	HardTune Echo	on	on	on	off	Delay	Decay	Feedback	Speed	Gender	LOWCUT	ON	LEAD FX	MICROMOD WIDER	352	352	SMOOTH PLATE
			2	Us&Them	on	off	on	off	µMod	Decay	Feedback	Speed	Gender	HIGHCUT	ON	LEAD	MICROMOD WIDER	555	555	SMOOTH PLATE
			3	Megaphone room	on	off	off	on	Reverb	Decay	Feedback	Speed	Distortion Amount	CLIP MEGAPHONE	OFF	LEAD FX	MEDIUM CHORUS	491	491	SMOOTH PLATE
			4	Slappin' Spring	off	off	on	on	Delay	Decay	Delay Time (short)	Detune	HighPass	BANDPASS	OFF	LEAD FX	NATURAL	100	100	SMOOTH PLATE
			5	Thicken Verb	off	on	off	on	µMod	Decay	Delay Time (short)	Speed	HighPass	CLEAR MEGAPHONE	OFF	LEAD FX	THICKEN	100	100	SMOOTH PLATE
			6	Filtered Echo	on	off	on	on	Delay	Decay	Feedback	Speed	HighPass	CLEAR MEGAPHONE	OFF	LEAD	MEDIUM CHORUS	545	545	SMOOTH PLATE
			7	Fast Rotor	off	on	off	off	Delay	Decay	Feedback	Speed	Distortion Amount	LOWCUT 2	OFF	LEAD	FAST ROTOR	470	235	SMOOTH PLATE
			8	Megaphone+Dry	on	on	off	off	µMod	Decay	Feedback	Detune	Distortion Amount	HARD DRIVE	OFF	LEAD	NATURAL	352	352	SMOOTH PLATE
		9	Octave Dn	on	on	off	off	µMod	Decay	Feedback	Speed	Gender	CLEAR MEGAPHONE	ON	LEAD	MICROMOD WIDER	434	217	SMOOTH PLATE	
Reverb	2, A	0	Snappy Room	off	off	off	on	Reverb	Decay	Feedback	Detune	HighPass	CLEAR MEGAPHONE	OFF	LEAD FX	MICROMOD CLONE	352	352	SMOOTH PLATE	
		2, B	1	Smooth Pl	on	off	off	on	Reverb	Decay	Feedback	Detune	Gender	LOWCUT	ON	LEAD FX	MICROMOD CLONE	705	705	SMOOTH PLATE
			2	B'Way Hall	off	off	on	on	Delay	Decay	Feedback	Speed	Distortion Amount	CLIP MEGAPHONE	OFF	LEAD	MICROMOD WIDER	600	600	SMOOTH PLATE
			3	Subtle Spring	off	off	on	on	Delay	Decay	Delay Time (short)	Speed	HighPass	PEAK RADIO	OFF	LEAD FX	MONO FLANGE	100	115	AMSTERDAM HALL
			4	Music Club	off	off	off	on	Reverb	Decay	Feedback	Detune	Distortion Amount	LOWCUT	OFF	LEAD	THICKEN	705	352	AMSTERDAM HALL
			5	Wood Chambr	off	off	off	on	Reverb	Decay	Feedback	Speed	HighPass	LOWCUT	OFF	LEAD	LIGHT CHORUS	705	528	AMSTERDAM HALL
			6	Dome Chapel	off	off	off	on	Reverb	Decay	Delay Time (short)	Speed	Distortion Amount	CLIP MEGAPHONE	OFF	LEAD	LIGHT CHORUS	100	100	BROADWAY HALL
			7	RealPlate Lng	off	off	on	on	Delay	Decay	Feedback	Detune	Distortion Amount	LOWCUT	OFF	LEAD	THICKEN	434	542	BROADWAY HALL
			8	Cozy Corner	off	off	off	on	Reverb	Decay	Delay Time (short)	Detune	Distortion Amount	PEAK RADIO	OFF	LEAD FX	NATURAL	110	110	BROADWAY HALL
		9	Indoor Arena	off	off	off	on	Reverb	Decay	Feedback	Speed	HighPass	LOWCUT 2	OFF	LEAD	MONO FLANGE	600	300	BROADWAY HALL	
Delay	3, A	0	Us & Them mono	on	off	on	off	Delay	Decay	Feedback	Speed	Gender	HIGHCUT	ON	LEAD	SOFT FLANGE	566	566	BROADWAY HALL	
		3, B	1	Narrow Multitap	off	off	on	off	Delay	Decay	Feedback	Detune	HighPass	BANDPASS 2	OFF	LEAD	MICROMOD CLONE	319	478	SNAPPY ROOM
			2	Mono Rockabilly	off	off	on	off	Delay	Decay	Delay Time (short)	Speed	HighPass	BANDPASS	OFF	LEAD FX	FAST ROTOR	140	140	SNAPPY ROOM
			3	Stereo LongPong	on	off	on	off	Delay	Decay	Feedback	Speed	HighPass	BANDPASS 2	ON	LEAD	FLANGER	1290	645	SNAPPY ROOM
			4	Early Room	off	off	on	off	Delay	Decay	Delay Time (short)	Speed	Distortion Amount	HIGHCUT	OFF	LEAD	FAST ROTOR	45	70	SNAPPY ROOM
			5	Wider Multitap	on	off	on	off	Delay	Decay	Feedback	Detune	HighPass	BANDPASS 2	ON	LEAD FX	THICKEN	344	517	SNAPPY ROOM
			6	Zero fback	off	off	on	off	Delay	Decay	Delay Time (short)	Speed	Distortion Amount	CLIP MEGAPHONE	OFF	LEAD FX	MEDIUM CHORUS	280	280	SNAPPY ROOM
			7	8 Feedback	off	off	on	off	Delay	Decay	Feedback	Detune	Distortion Amount	HIGHCUT	OFF	LEAD	TUBE	434	434	SNAPPY ROOM
			8	Mono Triplet	off	off	on	off	Delay	Decay	Feedback	Speed	HighPass	BANDPASS	OFF	LEAD FX	LIGHT CHORUS	493	493	SNAPPY ROOM
		9	Triplet Pong	off	off	on	off	Delay	Decay	Feedback	Speed	HighPass	LOWCUT 2	OFF	LEAD	MICROMOD WIDER	476	238	SNAPPY ROOM	
µMod	4, A	0	Light Flange	off	on	off	off	µMod	Decay	Feedback	Speed	Distortion Amount	HARD DRIVE	OFF	LEAD FX	FLANGER	491	491	SNAPPY ROOM	
		4, B	1	Med Chorus	off	on	off	off	µMod	Decay	Feedback	Speed	HighPass	LOWCUT	OFF	LEAD FX	MEDIUM CHORUS	600	300	SNAPPY ROOM
			2	Tube Flange	on	on	off	off	µMod	Decay	Feedback	Speed	Gender	LOWCUT	ON	LEAD	WIDE CHORUS	833	833	SNAPPY ROOM
			3	Fast Chorus	off	on	off	off	µMod	Decay	Feedback	Speed	HighPass	BANDPASS 2	OFF	LEAD FX	MEDIUM CHORUS	491	491	SNAPPY ROOM
			4	Silk Flange	off	on	off	off	µMod	Decay	Feedback	Speed	Distortion Amount	PEAK RADIO	OFF	LEAD	MONO FLANGE	352	352	SNAPPY ROOM
			5	Fast Rotor	off	on	on	on	µMod	Decay	Feedback	Speed	Distortion Amount	LOWCUT 2	OFF	LEAD	FAST ROTOR	470	235	SNAPPY ROOM
			6	Fast Phaser	off	on	off	off	µMod	Decay	Delay Time (short)	Speed	Distortion Amount	HARD DRIVE	OFF	LEAD	OTTAWA WIDE	110	150	SNAPPY ROOM
			7	Tube	off	on	off	off	µMod	Decay	Feedback	Detune	Distortion Amount	CLIP MEGAPHONE	OFF	LEAD	TUBE	491	491	SNAPPY ROOM
			8	Panner	off	on	off	off	µMod	Decay	Feedback	Speed	HighPass	BANDPASS	OFF	LEAD FX	PANNER	612	306	SNAPPY ROOM
		9	Thicken	off	on	off	off	µMod	Decay	Feedback	Detune	Distortion Amount	PEAK RADIO	OFF	LEAD	THICKEN	1200	1200	SNAPPY ROOM	
FX	5, A	0	Htune	on	on	on	on	µMod	Decay	Feedback	Speed	Distortion Amount	MEDIUM DRIVE	ON	LEAD	FLANGE NEGATIVE	352	352	SNAPPY ROOM	
		5, B	1	Htune Megaphone	on	off	off	off	FX	Decay	Feedback	Detune	Distortion Amount	CLIP MEGAPHONE	ON	LEAD FX	TUBE	491	491	LIBRARY
			2	Megaphone	on	off	off	off	FX	Decay	Feedback	Speed	Distortion Amount	CLIP MEGAPHONE	OFF	LEAD FX	MEDIUM CHORUS	491	491	LIBRARY
			3	Hard Drive	on	off	off	off	FX	Decay	Delay Time (short)	Speed	Distortion Amount	HARD DRIVE	OFF	LEAD	FLANGE NEGATIVE	110	150	DARK ROOM
			4	Tune Drive	on	off	off	off	FX	Decay	Feedback	Detune	Distortion Amount	HARD DRIVE	ON	LEAD	MICROMOD CLONE	352	352	DARK ROOM
			5	Peak Drive	on	off	off	off	FX	Decay	Delay Time (short)	Speed	Distortion Amount	BANDPASS	OFF	LEAD	FAST ROTOR	234	234	MUSIC CLUB
			6	Octave Down	on	on	off	off	µMod	Decay	Feedback	Speed	Gender	CLEAR MEGAPHONE	ON	LEAD	MICROMOD WIDER	434	217	MUSIC CLUB
			7	Megaphone Drone	on	off	off	off	FX	Decay	Delay Time (short)	Detune	HighPass	LOWCUT 2	ON	LEAD FX	CYLON STEREO	150	75	MUSIC CLUB
			8	Oct up Distort	on	off	off	on	Reverb	Decay	Feedback	Speed	Distortion Amount	MEDIUM DRIVE	ON	LEAD	FLANGER	500	250	MUSIC CLUB
		9	Bandpass1	on	off	off	off	FX	Decay	Feedback	Speed	HighPass	CLEAR MEGAPHONE	ON	LEAD FX	MEDIUM CHORUS	352	352	MUSIC CLUB	

TC-Helicon VoiceTone Create XT Detailed Style List

Style	Preset	Var.	Style Name	Blocks ON/OFF				Tweak Parameter					Block Details						
				FX	µMod	Delay	Reverb	Balance	Reverb	Delay	µMod	FX	FX - Transducer Style	FX - HardTune	FX - Routing	µMod Style	Delay ms L.	Delay ms R.	Reverb Style
Pop / R&B	6, A	0	Kanye Lockdown	on	off	on	off	Delay	Decay	Feedback	Detune	Gender	LOWCUT	ON	LEAD	MICROMOD CLONE	550	550	MUSIC CLUB
	6, B	1	Distort Mix	on	on	off	on	µMod	Decay	Feedback	Detune	Distortion Amount	BOXEY RADIO	OFF	LEAD	NATURAL	352	352	STUDIO LIVE ROOM
		2	Praise You	on	on	off	on	µMod	Decay	Feedback	Speed	Distortion Amount	BANDPASS	OFF	LEAD FX	ALIEN VOICEOVER	379	189	STUDIO LIVE ROOM
		3	Pop Doubling	off	on	off	on	µMod	Decay	Feedback	Speed	HighPass	CLEAR MEGAPHONE	OFF	LEAD FX	THICKEN	352	352	STRETCHED ROOM
		4	Htune Megaphone	on	off	on	off	Delay	Decay	Feedback	Detune	HighPass	LOWCUT 2	ON	LEAD FX	MICROMOD CLONE	500	500	STRETCHED ROOM
		5	In The Air	off	on	on	on	µMod	Decay	Delay Time (short)	Speed	HighPass	LOWCUT 2	OFF	LEAD	THICKEN	160	160	STRETCHED ROOM
		6	Let's Dance	on	off	on	on	Delay	Decay	Feedback	Detune	HighPass	BANDPASS	OFF	LEAD	MICROMOD CLONE	600	300	STRETCHED ROOM
		7	Distorted	on	off	off	off	FX	Decay	Delay Time (short)	Detune	Distortion Amount	CLEAR MEGAPHONE	OFF	LEAD FX	MICROMOD CLONE	100	100	STRETCHED ROOM
		8	Coldplay Violet	off	off	on	on	Delay	Decay	Delay Time (short)	Detune	HighPass	LOWCUT 2	OFF	LEAD	THICKEN	160	160	WAREHOUSE
	9	Elton Bennie	off	off	on	off	Delay	Decay	Delay Time (short)	Detune	HighPass	LOWCUT 2	OFF	LEAD	THICKEN	60	60	WAREHOUSE	
Rock / Metal	7, A	0	Bites Dust	off	on	on	on	µMod	Decay	Feedback	Detune	HighPass	BANDPASS 2	OFF	LEAD FX	TUBE	555	555	WAREHOUSE
	7, B	1	Been A LngTime	on	off	on	off	Delay	Decay	Delay Time (short)	Detune	HighPass	NATURAL	OFF	LEAD	MICROMOD CLONE	234	234	BOUNCY ROOM
		2	Black Dog	off	off	on	on	Delay	Decay	Feedback	Speed	HighPass	BANDPASS	OFF	LEAD FX	MICROMOD CLONE	370	370	BOUNCY ROOM
		3	Comfy Numb	off	off	on	on	Delay	Decay	Delay Time (short)	Speed	HighPass	BANDPASS 2	OFF	LEAD FX	WIDE CHORUS	50	70	BOUNCY ROOM
		4	Day Green	on	on	off	off	µMod	Decay	Feedback	Detune	HighPass	CLEAR MEGAPHONE	OFF	LEAD FX	MICROMOD CLONE	352	352	BOUNCY ROOM
		5	Doubling	off	on	off	off	µMod	Decay	Feedback	Detune	Distortion Amount	CLIP MEGAPHONE	OFF	LEAD	MICROMOD CLONE	352	352	BOUNCY ROOM
		6	Come Together	off	off	on	off	Delay	Decay	Delay Time (short)	Speed	HighPass	LOWCUT 2	OFF	LEAD	MICROMOD CLONE	100	100	REAL PLATE
		7	Vertigo	on	off	on	off	Delay	Decay	Feedback	Speed	HighPass	LOWCUT 2	OFF	LEAD	WIDE CHORUS	588	588	REAL PLATE
		8	BlueJayWay	on	on	on	on	µMod	Decay	Delay Time (short)	Speed	HighPass	BANDPASS 2	OFF	LEAD	FAST ROTOR	50	75	REAL PLATE
	9	Distort Mix	on	on	off	off	µMod	Decay	Feedback	Detune	HighPass	CLEAR MEGAPHONE	OFF	LEAD	NATURAL	352	352	REAL PLATE	
Oldies	8, A	0	Slap LoFi	on	off	on	off	Delay	Decay	Delay Time (short)	Detune	HighPass	LOWCUT	OFF	LEAD FX	MICROMOD CLONE	140	140	REAL PLATE
	8, B	1	LoFi Verb	on	off	off	on	Reverb	Decay	Delay Time (short)	Speed	HighPass	LOWCUT 2	OFF	LEAD	LIGHT CHORUS	211	213	REFLECTION PLATE
		2	LoFi Verb2	on	off	off	on	Reverb	Decay	Delay Time (short)	Speed	Distortion Amount	HARD DRIVE	OFF	LEAD	MEDIUM CHORUS	211	213	REFLECTION PLATE
		3	EchoPlate	off	off	on	on	Delay	Decay	Feedback	Detune	HighPass	BANDPASS 2	OFF	LEAD FX	THICKEN	352	352	THIN PLATE
		4	Rock On	off	off	on	off	Delay	Decay	Delay Time (short)	Detune	HighPass	LOWCUT 2	OFF	LEAD	THICKEN	190	190	BRIGHT CHAMBER
		5	Depeche Plate	off	off	on	on	Delay	Decay	Delay Time (short)	Detune	HighPass	LOWCUT	OFF	LEAD FX	THICKEN	160	160	BRIGHT CHAMBER
		6	Heartbake Hotel	off	off	on	on	Delay	Decay	Delay Time (short)	Detune	HighPass	BANDPASS	OFF	LEAD FX	NATURAL	130	130	BRIGHT CHAMBER
		7	Ring of Fire	on	off	on	off	Delay	Decay	Delay Time (short)	Detune	HighPass	LOWCUT	OFF	LEAD	NATURAL	140	140	BRIGHT PLATE
		8	Bennett Chicago	on	off	on	on	Delay	Decay	Delay Time (short)	Detune	HighPass	LOWCUT	OFF	LEAD	NATURAL	140	140	REAL PLATE SHORT
	9	Clipped Motown	on	off	off	on	Reverb	Decay	Delay Time (short)	Detune	Distortion Amount	MEDIUM DRIVE	OFF	LEAD FX	NATURAL	166	166	REAL PLATE LONG	
Jazz / Ballad	9, A	0	Jazz Plate	off	off	off	on	Reverb	Decay	Delay Time (short)	Detune	HighPass	LOWCUT	OFF	LEAD	THICKEN	300	300	WOODEN CHAMBER
	9, B	1	Roomish	off	off	off	on	Reverb	Decay	Delay Time (short)	Detune	HighPass	LOWCUT 2	OFF	LEAD	THICKEN	300	300	JAZZ PLATE
		2	PreDelayVerb	on	off	on	on	Delay	Decay	Feedback	Detune	HighPass	LOWCUT	OFF	LEAD	THICKEN	480	480	JAZZ PLATE
		3	Locut fx send	on	off	on	on	Delay	Decay	Feedback	Detune	HighPass	LOWCUT 2	OFF	LEAD	THICKEN	600	300	QUICK PLATE
		4	Hicut 1	on	off	on	on	Delay	Decay	Feedback	Speed	HighPass	BANDPASS 2	OFF	LEAD	MEDIUM CHORUS	1070	1070	QUICK PLATE
		5	Thicken Lowcut	on	on	on	on	µMod	Decay	Feedback	Detune	HighPass	LOWCUT	OFF	LEAD	THICKEN	352	352	QUICK PLATE
		6	Phone Echo	on	off	on	on	Delay	Decay	Feedback	Speed	HighPass	CLEAR MEGAPHONE	OFF	LEAD	MEDIUM CHORUS	545	545	ST. JOSEPH CHURCH
		7	Short Ambience	off	off	on	on	Delay	Decay	Delay Time (short)	Speed	HighPass	LOWCUT 2	OFF	LEAD	MICROMOD WIDER	225	175	HOCKEY ARENA
		8	Ducked LongEcho	off	off	on	on	Delay	Decay	Feedback	Speed	HighPass	LOWCUT 2	OFF	LEAD	FLANGER	800	800	HOCKEY ARENA
	9	SpringyPreDelay	on	off	on	on	Delay	Decay	Delay Time (short)	Speed	HighPass	LOWCUT	OFF	LEAD	FLANGER	125	125	DOME CHAPEL	
Electronic	10, A	0	Double and Mayo	on	on	on	on	µMod	Decay	Feedback	Speed	HighPass	CLEAR MEGAPHONE	OFF	LEAD	THICKEN	521	521	DOME CHAPEL
	10, B	1	Skinny 1	off	off	on	off	Delay	Decay	Feedback	Detune	Distortion Amount	PEAK RADIO	OFF	LEAD FX	TUBE	500	500	MUSEUM
		2	Tap PingPong	on	off	on	on	Delay	Decay	Feedback	Speed	HighPass	LOWCUT 2	OFF	LEAD	MONO FLANGE	769	384	INDOOR ARENA
		3	DistortFlg Dly	on	on	on	off	µMod	Decay	Feedback	Speed	HighPass	HARD DRIVE	OFF	LEAD FX	FLANGE FEEDBACK	500	250	COZY CORNER
		4	Long Duck Delay	on	off	on	off	µMod	Decay	Feedback	Detune	Gender	NATURAL	ON	LEAD FX	THICKEN	500	1000	THIN SPRING
		5	Long&Short Duck	on	off	on	on	Delay	Decay	Feedback	Speed	Distortion Amount	RADIO DRIVE	OFF	LEAD FX	THICKEN	225	902	THIN SPRING
		6	Htune Tap delay	on	off	on	off	Delay	Decay	Feedback	Detune	Gender	HARD DRIVE	ON	LEAD	THICKEN	500	500	THIN SPRING
		7	Octave Panner	on	on	off	on	µMod	Decay	Feedback	Speed	Distortion Amount	SOFT DRIVE	ON	LEAD	PANNER	500	500	FULL SPRING
		8	Cylon Drone	on	on	off	off	µMod	Decay	Feedback	Detune	Distortion Amount	BOXEY RADIO	ON	LEAD FX	TUBE	480	720	FULL SPRING
	9	Days go By	on	on	on	on	µMod	Decay	Feedback	Detune	Distortion Amount	CLIP MEGAPHONE	ON	LEAD	NATURAL	480	720	FULL SPRING	